

Pneumo Assembly WORKSHOP

Model 76513RK

Pneumo Chest Tube Repair kits were added to the Polygraph product line as a convenient, cost effective means of getting a longer service life from your Pneumo Chest Assembly. Every examiner should have one.



Repairing the Pneumo Chest Tube

Using the diagrams, follow the steps below and on reverse side to repair the pneumo chest tube.

1. Break the glue seal on both ends of the corrugated tube by running a small screwdriver around under the edge. (Diagram 1).
2. Hold the corrugated tube and twist one end at a time to separate it.

3. Knock out the 1/16" metal pin on both ends which retains the rubber bands. (Diagram 2).

4. Place one end of the new rubber band from the chest tube repair kit inside the end piece. (Diagram 3) and drive the pin back into place.


5. Insert the 8-inch hooked tool, provided in the kit, insert it through the corrugated tube, hook the rubber band and pull it through. (Diagram 4).

6. Grasp the end of the rubber band and detach the tool. Insert the band into the end piece and drive the 1/16" inch in into place to secure it.

7. Open the bottle of glue provided, apply generously to one end piece at a time, and slip the cuff of the corrugated tube on as for as possible.

8. Twist one end piece to orient the flat plates so they are parallel with each other. (Diagram 5).


Let dry for 15 minutes and install new 7-foot tubing provided and quick disconnect.

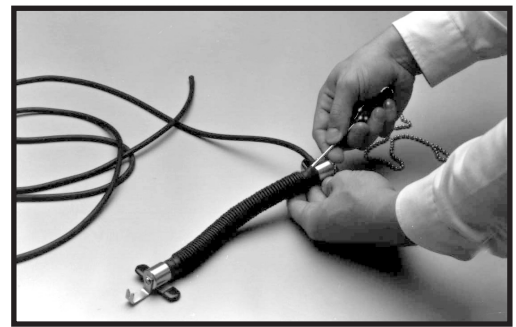


(Diagram 1)



(Diagram 2)

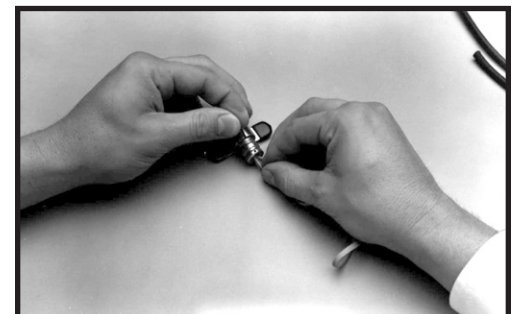

(Diagram 3)

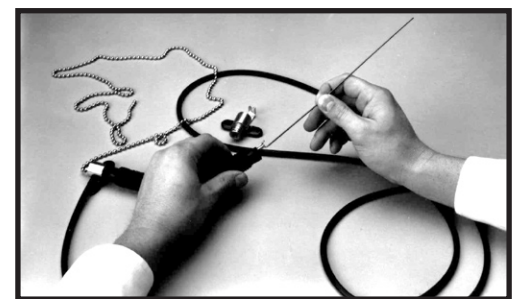

(Diagram 4)



(Diagram 5)

For additional information and pricing:



3700 Sagamore Parkway North
P.O. Box 5729 · Lafayette, IN 47903 U.S.A.
Tel: (765) 423-1505 · Fax: (765) 423-4111
E-mail: info@lafayetteinstrument.com
www.lafayetteinstrument.com